


ZION ARMS®

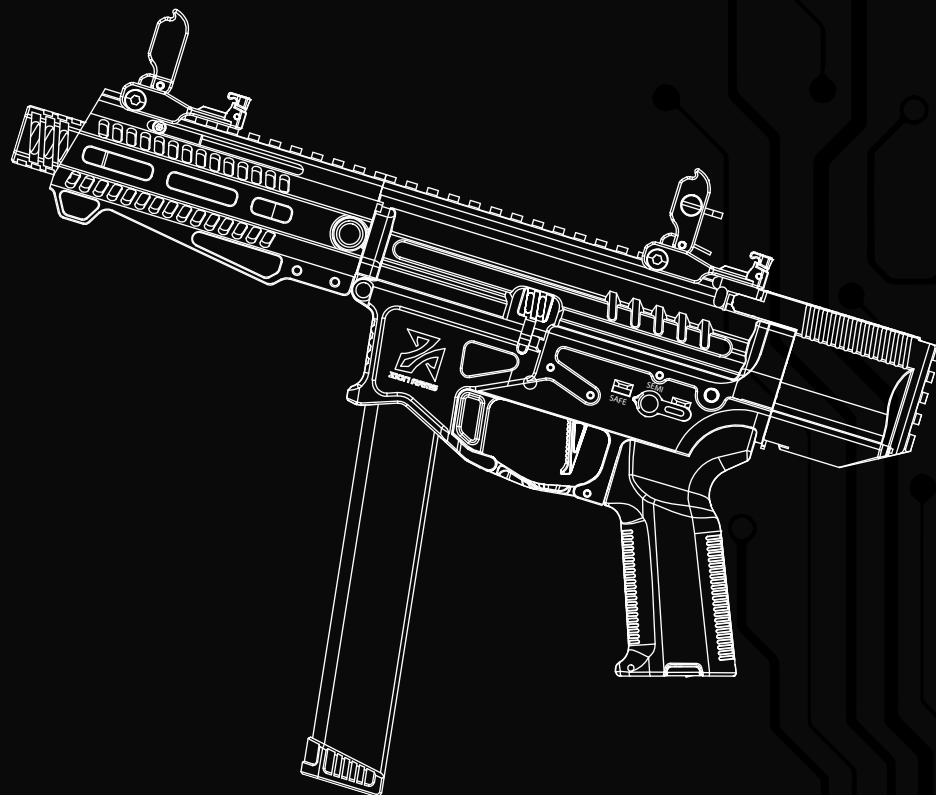

REPLIQUE A RESSORT

C'est une réplique à ressort légale qui propulse uniquement des billes plastiques de 6mm à l'aide d'un ressort. Cette réplique est en adéquation avec les recommandations de la loi française et applique le décret sur l'Airsoft :

DECRET N° 99-240 DU 24 MARS 1999 REGLEMENTANT LA VENTE EN France Objet ayant l'apparence d'une arme à feu ☒ distribution et vente interdite aux mineurs ☒ ce modèle développe une énergie supérieure à 0.08 joule et inférieure ou égale à 2 joules.

DANGER : Ceci n'est pas un jouet. Une mauvaise utilisation peut causer des dommages sérieux. Les billes plastiques volent environ jusqu'à 70 mètres. Ne jamais pointer ou tirer sur une personne ou un animal.

AGE LEGAL : L'acheteur doit impérativement être majeur. Les mineurs doivent être en présence d'un adulte qui sera légalement responsable. L'utilisation de cette réplique est uniquement destinée à l'entraînement sur des zones de jeux précises. Les utilisateurs doivent respecter les lois et réglementations. Les ventes sont interdites aux mineurs.

PROTECTION DES YEUX RECOISES : Toujours porter des lunettes de protection pour éviter des lésions oculaires. Ne pas tirer sur des surfaces dures pour éviter les ricochets.

LIRE LES INSTRUCTIONS AVANT UTILISATION : toujours suivre les recommandations de sécurité. L'acheteur ou l'utilisateur doivent respecter les lois du pays et également les recommandations de sécurité des propriétaires des terrains sur lesquels les parties sont organisées.

ETOUFFEMENT DANGEREUX : laisser hors de portée des enfants

ATTENTION : Ne pas modifier, altérer ou effacer les marquages requis par la loi, la garantie serait nulle.

Un adulte doit toujours être présent et sera légalement responsable si le produit est utilisé par des mineurs.

Ce produit ne peut être vendu qu'aux personnes majeures.

Toujours porter des lunettes de protection.

FABRIQUE EN CHINE – Importé et Distribué par Sn Europarm – 72200 La Flèche – France – info@europarm.fr

PW9 Airsoft Pistol

Licensed by R&D Precision

MOD-0



ZIONARMS.COM






ZIONARMS.EU

© 2021 ZION ARMS. All rights reserved.
Designed in California USA.
Made in China.

Parts Diagram

Exploded View

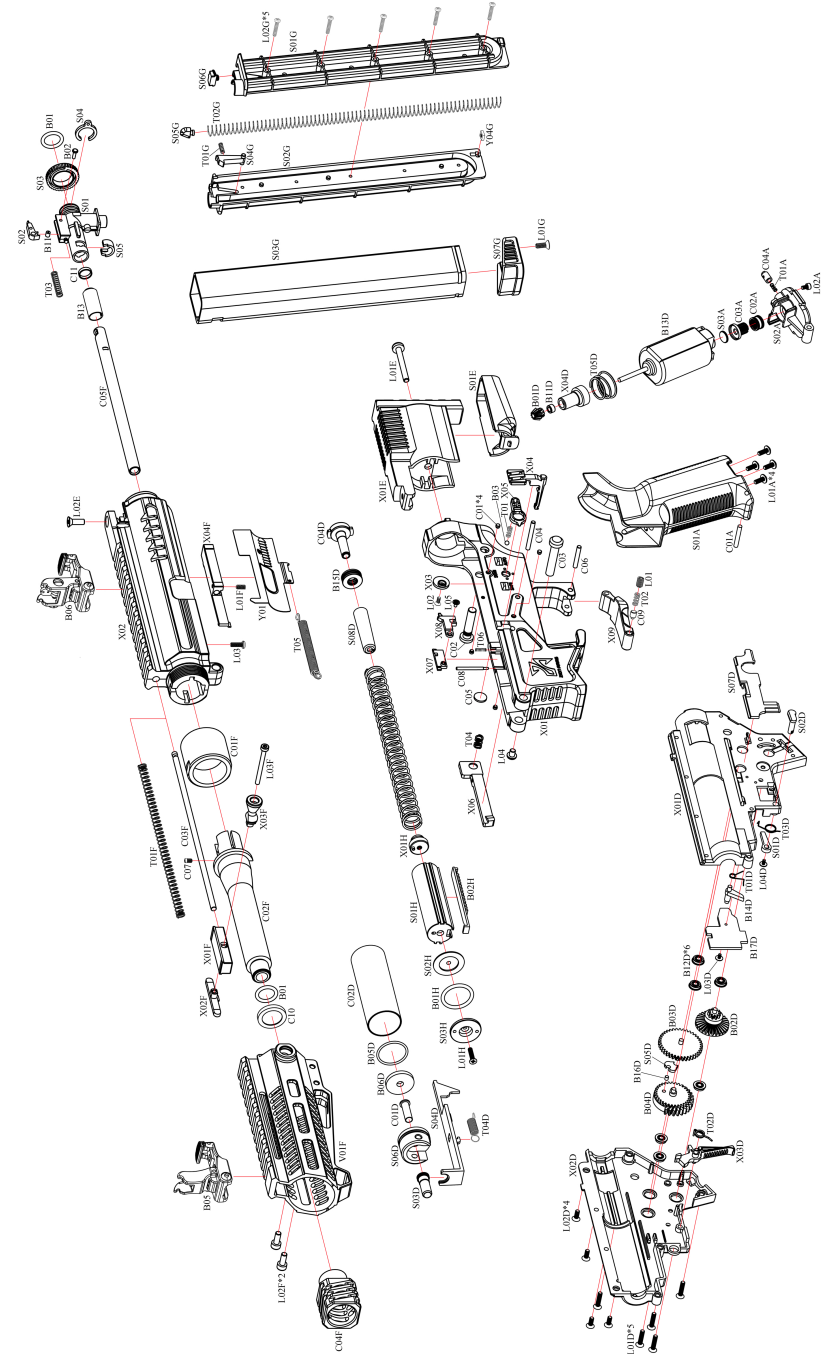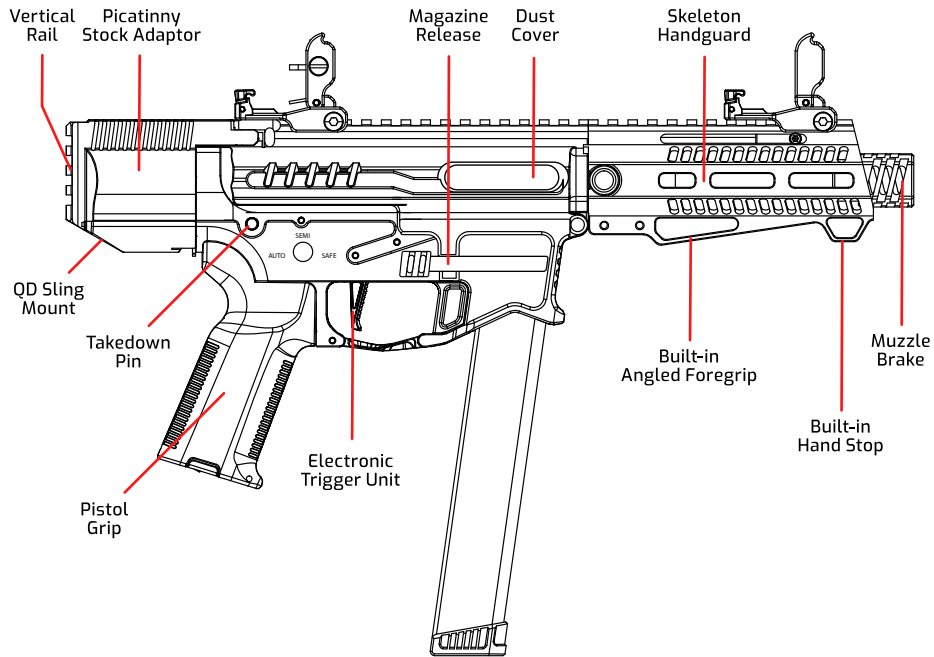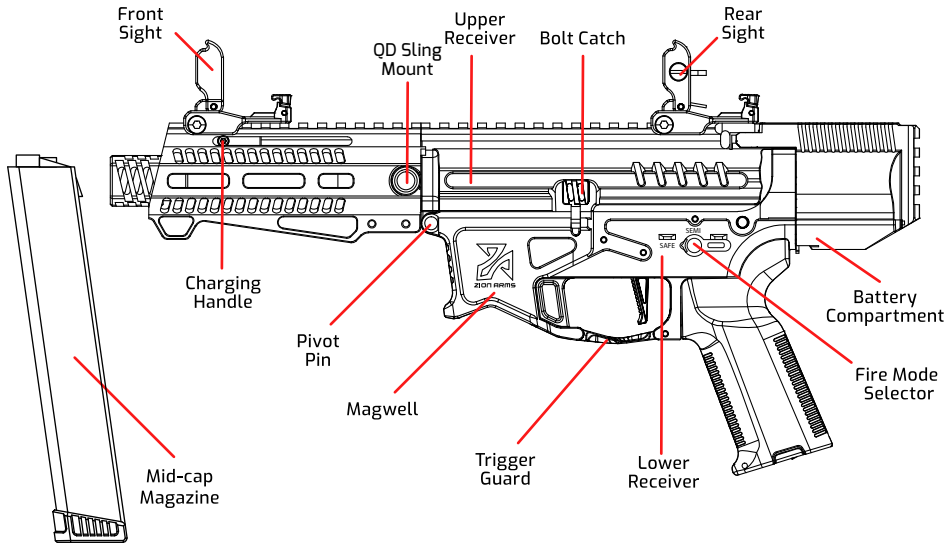

Safety Guidelines

Read through the following safety guidelines and warnings in this manual to ensure safe handling and operation of the airsoft gun. Failure to do so may lead to injury or other serious bodily harm, as well as legal liability and potential damage to the product.

ONLY POINT THE MUZZLE AT THE INTENDED TARGET

Practicing good muzzle control will prevent others from being injured and lower the amount of friendly-fire.

KEEP THE AIRSOFT GUN UNLOADED WHEN NOT IN USE

Wait until you are on the field and everyone has eye pro on before loading your airsoft gun. When you leave the field (even just to go grab something from the staging area), eject the magazine and fire several shots at the ground to clear the airsoft gun. Perform regular maintenance on your airsoft weapon to make sure that it remains safe for use.

BE SURE OF YOUR TARGET AND BEYOND

To minimize the potential for unexpected injury, always be aware of what is behind, beyond and either side of your target before you fire your airsoft gun at your target.

USE HIGH QUALITY AMMUNITION

Cheap BBs have been known to shatter on impact, resulting in plastic shrapnel flying in all directions. Using quality BBs is safer for you, your teammates, and your airsoft gun.

IF YOUR AIRSOFT GUN FAILS TO FIRE, TAKE PRECAUTIONS

If your airsoft gun fails to function as it should and you can't correct the issue in-game, unload the mag, try to clear the airsoft gun (or unplug the battery), and use a secondary weapon. If you do not have a secondary, you can still support your team by being a spotter and doing recon. After the game, unplug the battery and attempt repairs in a safe environment.

ALWAYS WEAR EYE AND FACE PROTECTION

You must make sure that both you and those around you are wearing protective, shatterproof goggles, but ideally have full-face masks on. This way, your ears, cheeks, teeth, and eyes are all protected at the same time. You should also be sure to wear thick clothing in case you accidentally get hit, to minimize physical damage.

CLEAR AND CLEAN YOUR AIRSOFT GUN BARREL

After each scenario at a game, clear your airsoft gun by firing at the ground a few times with the mag out to clear any BBs still in the hop-up. When you get home, clean the inner barrel to prevent jams and increase accuracy.

DO NOT RELY SOLELY ON THE "SAFETY"

A safety is a mechanical device, not a substitute for common sense and good safety procedures. Always treat your airsoft gun as if it is loaded and ready to fire.

DO NOT ALTER AIRSOFT GUNS WITHOUT TECH EXPERIENCE

If you try to upgrade your airsoft gun without proper experience, you not only risk breaking the gun, you also may make it a part-spewing, overpowered death machine (that was not meant to sound cool in any way). Spend the time to learn how to upgrade airsoft guns properly and talk to professional airsoft techs to figure out what the best upgrades are.

LEARN HOW AIRSOFT GUNS WORK


Learning how airsoft guns work allows you to understand the reason things go wrong with your airsoft gun, and direct you to make informed decisions about upgrading. It will also keep you safer on the field because you will have the knowledge to correct issues and prevent them in the future.

Specifications


MUZZLE VELOCITY	380-395 fps (330-345 low fps. Quick-Change low fps spring included)
RPS	22-25
MAGAZINE	120rd, 6mm
SPRING	Installed M120 spring and extra low fps M95 spring included
MOTOR	High-Torque 19K RPM
MATERIAL	Metal
BATTERY	Recommend ZION ARMS 11.1V 900mAh Brick Lipo Battery (ITEM NO: ZN-LIP011.1V800FD, Not included)
BATTERY CONNECTOR	DEANS
FEATURES	Built-in NEBULA programmable electric trigger unit. Fast Trigger, Ball Bearing Spring Guide, Steel Piston Teeth, 18:1 Gear Set, 8mm Ball Bearing, 6.03 Inner Barrel
IN THE PACKAGE	Rifle x1, Magazine x1, Extra Low FPS Spring x1, Clean Rod x1, Patch x1, BB loader x1 (Some packages may include more items) NOTE: BATTERY AND CHARGER SOLD SEPARATELY

Loading Instructions


BATTERIES

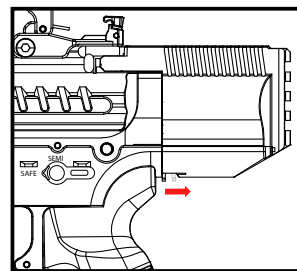

The battery compartment can be found under the picatinny stock adaptor. Pull tab back to open cover.

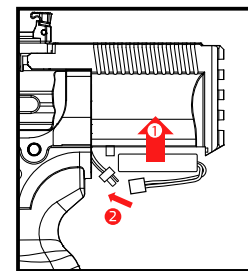


1. Insert battery into compartment as shown.
2. Pull out battery connector. Connect the cables together.

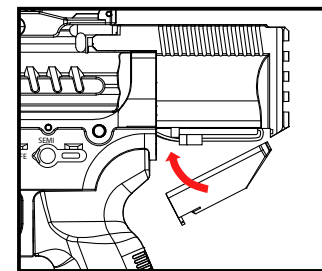


Ensure that the battery and cables are flushed flat. Close cover, making sure the tab clicks into place.


MAGAZINE

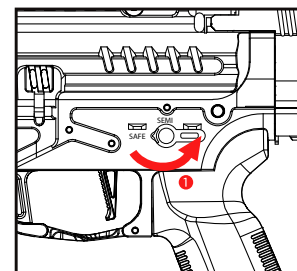

1. Be sure to set the airsoft gun to safe mode.

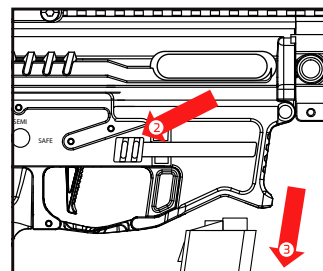


2. Press and hold the magazine release button.
3. Pull the magazine out.

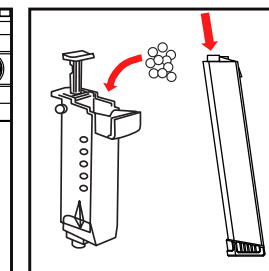


Load magazine using BB speedloader. Do not overfill magazine. [BB speed-loader included]*

Functions


SELECTOR SWITCH

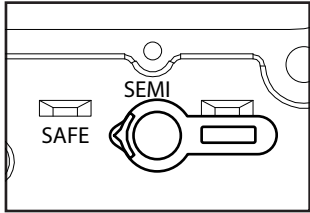

Safe Mode: Always set to safe when not in use. In this mode, the trigger will not pull and the airsoft gun will not fire.

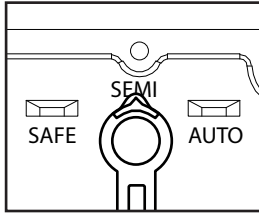

Semi-Auto will fire one single BB each time the trigger is pulled.

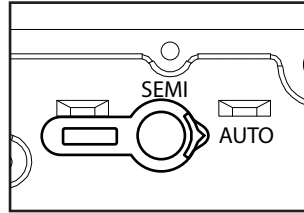


Full-Auto will continuously fire as long as the trigger remains pressed.

Quick Tip


If the trigger is stuck while in semi-auto mode, flip the selector switch to full-auto mode and fire several times to reset the cut-off lever. Low battery power may be the cause for this type of problem.

NEBULA™ TRIGGER UNIT

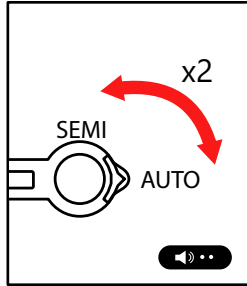


ENTER PROGRAM MODE

Set to auto, turn the selector twice from semi to auto. The ETU will beep twice to indicate it is in the program mode.

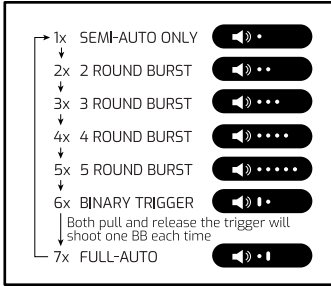

PROGRAM CONFIGURATION


Pull trigger (less than 2 seconds)
*8 times and Up recycles the option selections

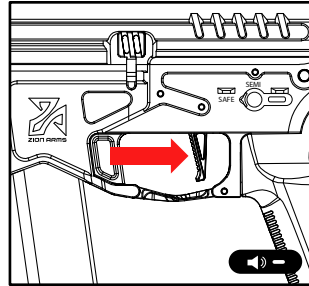


CONFIRM CHANGES

Hold the trigger for over 2 seconds. The ETU will long beep once. Configuration will be saved and exit program mode.


ADJUSTING HOP-UP SYSTEM

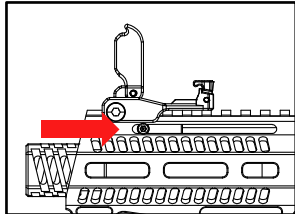

Pull the charging handle back to move the bolt plate back, thus exposing the hop-up adjustment dial. Hold in place while adjusting the hop-up.

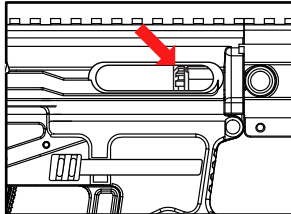


Turning the dial affects the amount of hop-up, or "back-spin", of the BBs. Turning the dial downward will cause the BB to float upwards, whereas turning the dial upward causes the BB to fall downward.

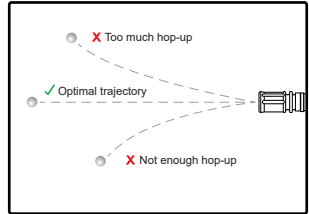


Alternate shooting BBs and making adjustments. Adjust the dial until the BBs shoot straight and the longest flying distance is obtained.


Disassembly

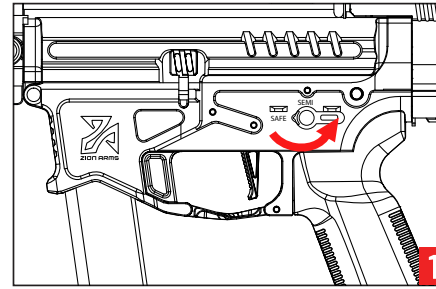


Be sure to safely disarm the airsoft pistol before disassembly. Set to safe mode.

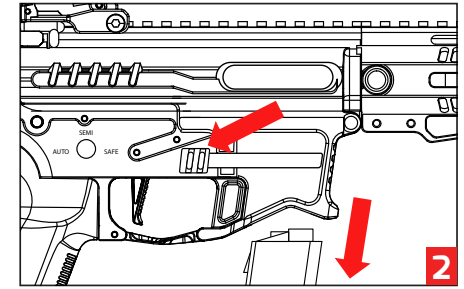


Then remove the magazine using the release button.

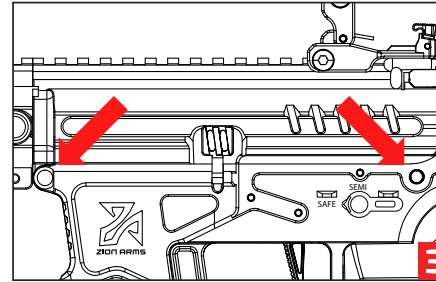


Push out the pivot and takedown pins.

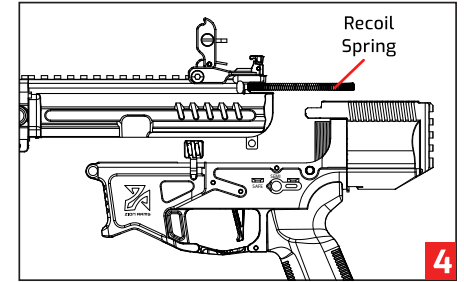

Gripping the upper receiver in one hand and lower receiver in the other, slide apart. The recoil spring will now be exposed.

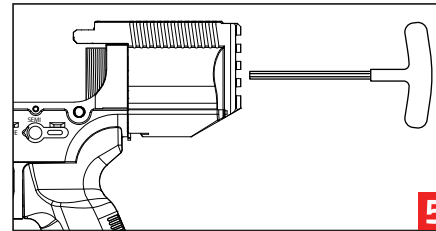

With a 3/16 hex key, unscrew the bolt at the end of the Picatinny stock adaptor.

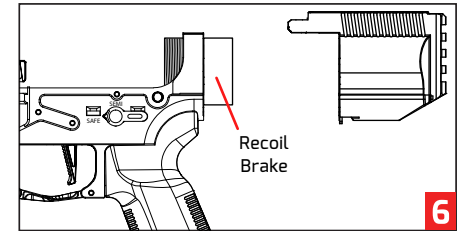

Removing the Picatinny stock adaptor reveals the recoil brake. Turn counter-clockwise to remove the recoil brake.

Warranty

ZION ARMS offers a limited warranty on all registered products sold by our authorized dealers. This limited warranty covers defects in material and/or workmanship for a period of 1 year from the date of purchase. Proof of purchase must accompany any warranty claim.

Make sure your purchase was made from an authorized dealer before registering your ZION ARMS product.

For online registration, please visit zionarms.com/warranty-registration

Contact customer service via email at info@zionarms.com

